


Fault LED Wiring Diagram

For models:

DCR50, DCF50, DCR165, DCF165, DCR225, DCF225, DCRF290

Make sure the flat side of the LED is facing downward/connected to D/I

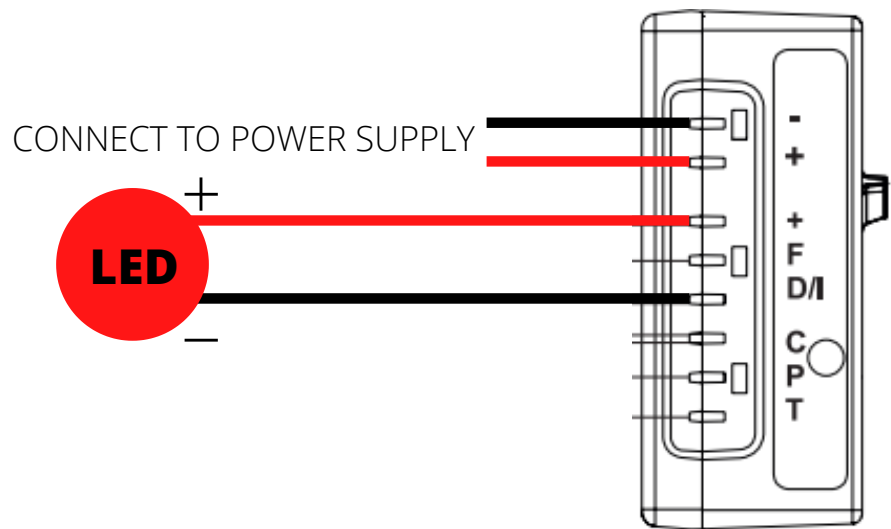

For models:

DCF390, DCRF450

Make sure the flat side of the LED is facing downward/connected to G

