

***PROTECT YOUR STORED
SEMIPERISHABLES***

ISO SHIPPING CONTAINER THERMAL BARRIER



In desert environments, the inside of an uncovered container reaches **30 °F above** the ambient.

The SunDanzer ISOcover™ keeps the partly filled interior close to the ambient temperature.


In a hot, sunny environment like Arizona or Afghanistan, **MREs will last a year or more without spoilage using the ISOcover™**. Without a thermal barrier, the semi-perishable rations are spoiled in only 2 or 3 summer months.



- Velcro straps to container corner caps
- Aluminized thermal barrier performance
- Three part design for quick set-up
- Durable 12 lb vinyl exterior
- Tested in 90 mph wind
- Easy access velcro door covers
- US Army technology SBIR A07-162

TEST RESULTS. EL PASO, TX


JUNE 2010. DAILY TEMPERATURES

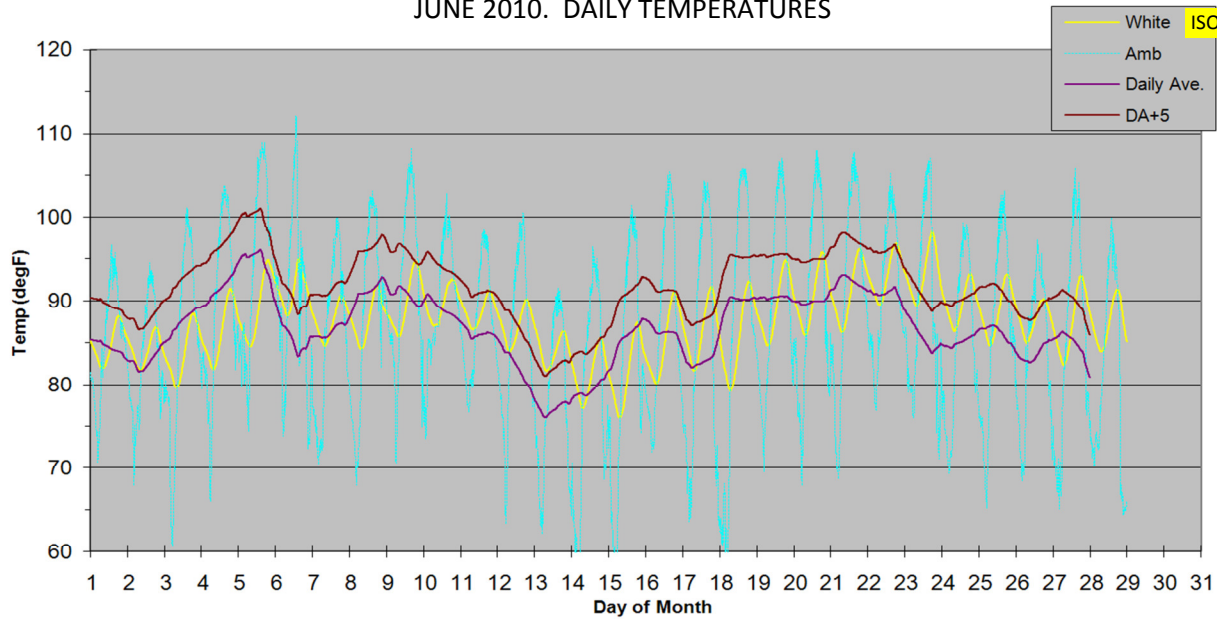

TEMPERATURE INSIDE ISOcover CONTAINER RARELY EXCEEDS DAILY AVERAGE PLUS 5°F AND NEVER APPROACHES DAILY MAXIMUM

JUNE 2010. DAILY TEMPERATURES

White ISOcover vs. Tan Cover and Uncovered

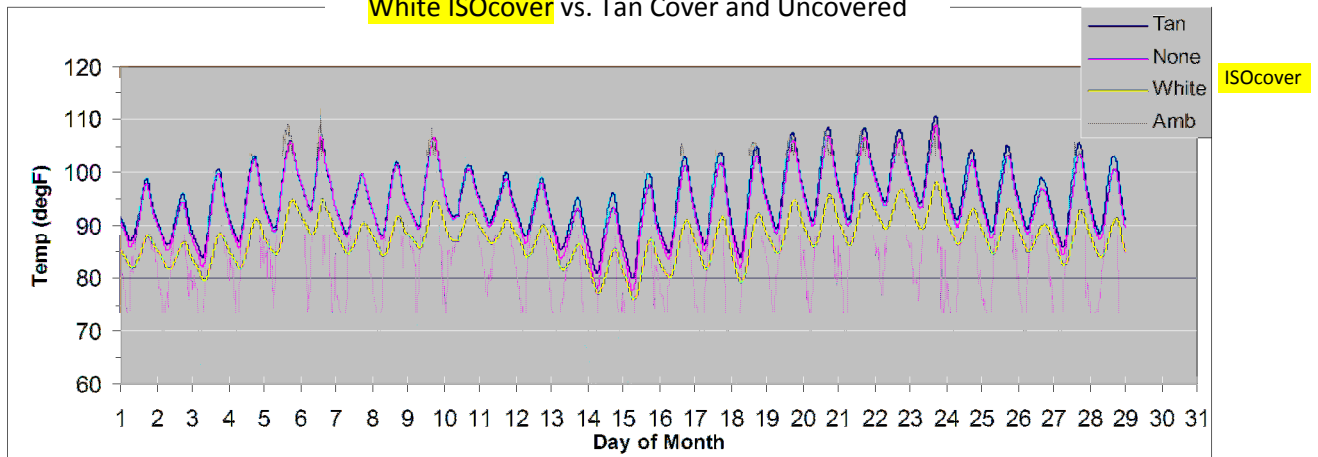

TEMPERATURE INSIDE UNCOVERED CONTAINER OFTEN EXCEEDS DAILY HIGH